

ONEWHEEL+

FOOTPAD INSTALLATION

DIY USER'S MANUAL

WARNING



FAILURE TO PROPERLY INSTALL FOOTPAD CONNECTOR MAY RESULT IN SERIOUS INJURY OR DEATH. IF YOU ARE NOT COMFORTABLE PERFORMING THIS REPAIR PLEASE CONTACT ONEWHEEL CUSTOMER CARE AND ARRANGE TO HAVE YOUR FOOTPAD REPLACED AT A FACTORY REPAIR CENTER.

SUPPORT@ONEWHEEL.COM


1

FOOTPAD REMOVAL


(SENSOR SIDE)

- REMOVE THE TWO FLATHEAD CAP SCREWS ON THE UNDERSIDE OF THE BUMPER.
- REMOVE THE TWO FLATHEAD CAP SCREWS ON THE FOOTPAD CLOSE TO THE WHEEL.

NOTE: THE HARDWARE IS HELD IN PLACE USING A THREAD LOCKING COMPOUND AND MAY REQUIRE SOME FORCE TO REMOVE.

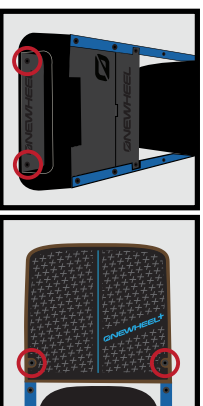

- CAREFULLY TILT FOOTPAD UP FROM THE FRONT EDGE. THERE IS A SHORT CABLE CONNECTING THE FOOTPAD TO THE CONTROLLER.

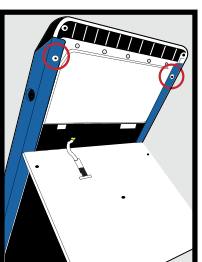


WARNING! DO NOT PULL ON FOOTPAD. YOU MAY BREAK THE FOOTPAD TO THE CONTROLLER.

2


FOOTPAD REMOVAL

(SENSOR SIDE)

- THE FOOTPAD CONNECTOR IS CLEARLY MARKED BY A YELLOW RING.

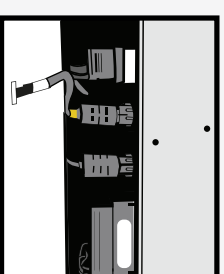

- USING THE WRENCH PROVIDED, TURN FOOTPAD CONNECTOR LOCKING RING COUNTER-CLOCKWISE UNTIL IT'S LOCKING IS RELEASED. USING YOUR FINGERS, CONTINUE ROTATING IN THE SAME DIRECTION UNTIL COMPLETELY LOOSE.

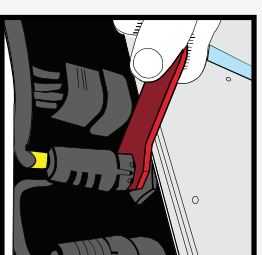

- PULL CONNECTOR TO DISCONNECT FOOTPAD FROM CONTROLLER.

FOOTPAD INSTALLATION


(SENSOR SIDE)

- CAREFULLY PUSH FOOTPAD CONNECTOR INTO MATING PLUG (YELLOW RING) WITH THE NOTCH ORIENTED UP.
- USING WRENCH PROVIDED, TWIST FOOTPAD CONNECTOR LOCKING RING CLOCKWISE UNTIL A CLICK IS FELT.
- WARNING! VERY IMPORTANT!** UNDER OR OVER-TIGHTENING FOOTPAD CONNECTOR LOCKING RING MAY CAUSE CONNECTOR TO DISCONNECT WHILE RIDING, CAUSING SERIOUS INJURY OR DEATH.
- CAREFULLY LOWER FOOTPAD ONTO FRAME RAILS, ENSURING THAT NEITHER THE FOOTPAD CABLE OR ANY OTHER CABLE GETS PINCHED BETWEEN FOOTPAD AND FRAME RAILS OR OTHER COMPONENTS.
- USING PROVIDED 1/8" HEX KEY, INSTALL THE TWO FLATHEAD CAP SCREWS ON THE FOOTPAD CLOSE TO THE WHEEL.
- INSTALL THE TWO FLATHEAD CAP SCREWS ON THE UNDERSIDE OF THE BUMPER.


FOOTPAD REMOVAL

(NON-SENSOR SIDE)

- REMOVE THE TWO FLATHEAD CAP SCREWS ON THE UNDERSIDE OF THE BUMPER.
- NOTE:** THE HARDWARE IS HELD IN PLACE USING A THREAD LOCKING COMPOUND AND MAY REQUIRE SOME FORCE TO REMOVE.

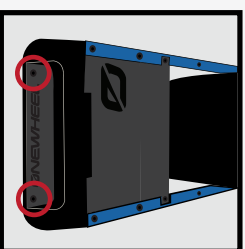


- REMOVE THE TWO FLATHEAD CAP SCREWS ON THE FOOTPAD CLOSE TO THE WHEEL.

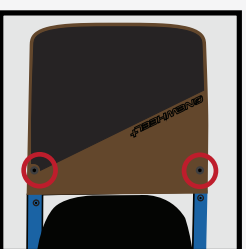


FOOTPAD INSTALLATION

(NON-SENSOR SIDE)

- ALIGN FOOTPAD WITH BOLT HOLES AND INSTALL THE NEW FLATHEAD CAP SCREWS PROVIDED ON THE TOP OF THE FOOTPAD USING A 1/8" HEX KEY.

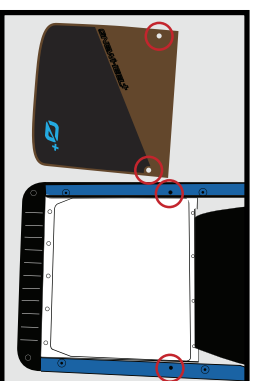

- NEXT FLIP THE BOARD OVER AND INSTALL THE TWO SCREWS UNDERNEATH THE FOOTPAD.

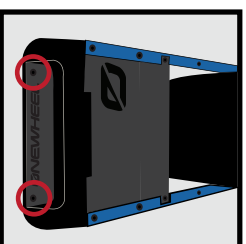

NEWHEEL+

FOOTPAD KIT