


1

FOOTPAD REMOVAL


[SENSOR SIDE]

- REMOVE THE TWO FLATHEAD CAP SCREWS ON THE FOOTPAD CLOSE TO THE WHEEL WITH THE PROVIDED STAR KEY.

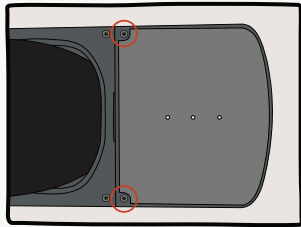

- FLIP BOARD OVER AND REMOVE THE FOUR FLATHEAD CAP SCREWS ON THE UNDERSIDE OF THE FRONT BUMPER (CIRCLED IN RED).

NOTE: THE HARDWARE IS HELD IN PLACE USING A THREAD LOCKING COMPOUND AND MAY REQUIRE SOME FORCE TO REMOVE.

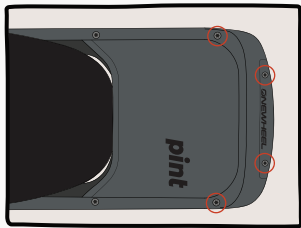


2

FOOTPAD REMOVAL


[SENSOR SIDE]

- CAREFULLY TILT THE FOOTPAD UP FROM THE FRONT EDGE. THERE IS A SHORT CABLE CONNECTING THE FOOTPAD TO THE CONTROLLER.

WARNING: DO NOT PULL ON THE FOOTPAD. YOU MAY DAMAGE THE FOOTPAD OR CONTROLLER.

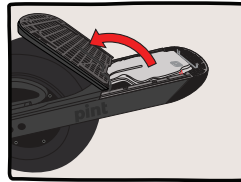

- USING THE WRENCH PROVIDED, TURN THE FOOTPAD CONNECTOR LOCKING RING COUNTER-CLOCKWISE UNTIL RELEASED. USING YOUR FINGERS, ROTATE UNTIL REMOVED.

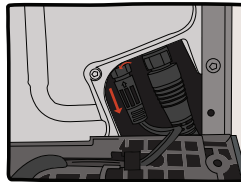

- PULL CONNECTOR TO DISCONNECT FOOTPAD FROM CONTROLLER.
- REMOVE THE FOOTPAD.

3

FOOTPAD INSTALLATION

[SENSOR SIDE]

- CAREFULLY REST THE NEW FOOTPAD AGAINST THE WHEEL.
- CAREFULLY PUSH FOOTPAD CONNECTOR INTO MATING PLUG WITH THE NOTCH ORIENTED UP.
- USING WRENCH PROVIDED. TWIST FOOTPAD CONNECTOR LOCKING RING CLOCKWISE UNTIL A CLICK IS FELT.

WARNING! VERY IMPORTANT! UNDER OR OVERTIGHTENING FOOTPAD CONNECTOR LOCKING RING MAY CAUSE CONNECTOR TO DISCONNECT WHILE RIDING. CAUSING SERIOUS INJURY OR DEATH.




WARNING: FAILURE TO PROPERLY INSTALL FOOTPAD CONNECTOR MAY RESULT IN SERIOUS INJURY OR DEATH. IF YOU ARE NOT COMFORTABLE PERFORMING THIS REPAIR PLEASE CONTACT ONEWHEEL CUSTOMER CARE AND ARRANGE TO HAVE YOUR FOOTPAD REPLACED AT A FACTORY REPAIR CENTER.

4


FOOTPAD INSTALLATION

[SENSOR SIDE]

- CAREFULLY LOWER FOOTPAD ONTO FRAME RAILS AND ENSURE THAT NEITHER THE FOOTPAD CABLE OR ANY OTHER CABLE GETS PINCHED BETWEEN FOOTPAD, FRAME RAILS OR OTHER COMPONENTS.
- USING PROVIDED STAR KEY INSTALL THE TWO FLATHEAD CAP SCREWS ON THE FOOTPAD CLOSE TO THE WHEEL.

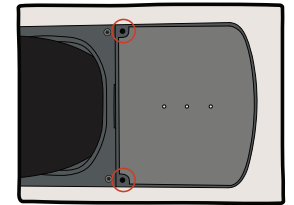

- INSTALL THE FOUR FLATHEAD CAP SCREWS ON THE UNDERSIDE OF THE FRONT BUMPER.

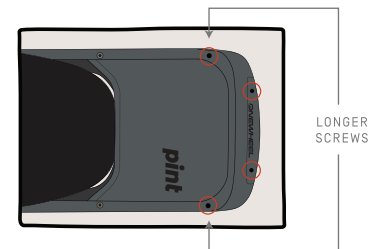



FOR INSTRUCTIONAL VIDEOS & TIPS
VISIT [ONEWHEEL.COM/PAGES/SUPPORT](https://www.onewheel.com/pages/support)


[ONEWHEEL.COM](https://www.onewheel.com)

5

FOOTPAD REMOVAL


[NON-SENSOR SIDE]

- REMOVE THE TWO FLATHEAD CAP SCREWS ON THE FOOTPAD CLOSE TO THE WHEEL.

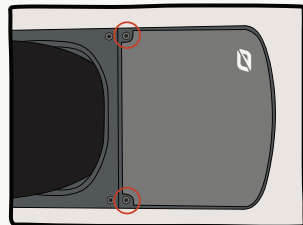

- FLIP THE BOARD OVER AND REMOVE THE FOUR FLATHEAD CAP SCREWS ON THE UNDERSIDE OF THE BACK BUMPER.

NOTE: THE HARDWARE IS HELD IN PLACE USING A THREAD LOCKING COMPOUND AND MAY REQUIRE SOME FORCE TO REMOVE.

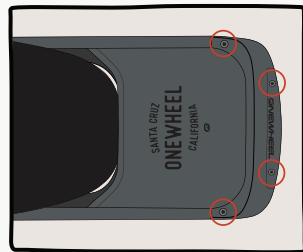


6


FOOTPAD INSTALLATION

[NON-SENSOR SIDE]

- ALIGN FOOTPAD WITH BOLT HOLES AND INSTALL THE ORIGINAL FLATHEAD CAP SCREWS ON THE TOP OF THE FOOTPAD USING THE STAR KEY.

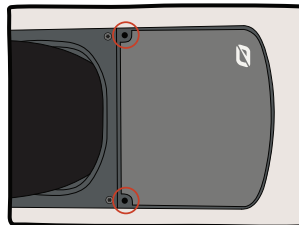

- NEXT FLIP THE BOARD OVER AND INSTALL THE FOUR SCREWS ON THE UNDERSIDE THE BACK BUMPER.

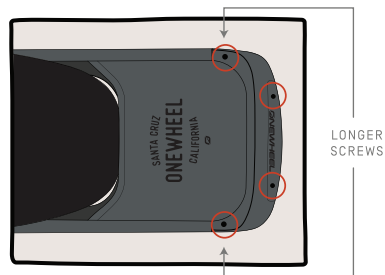

DIY USER'S
MANUAL

*pin*t